


REAR WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

Hydraulic Layout

INFOID:000000001209010

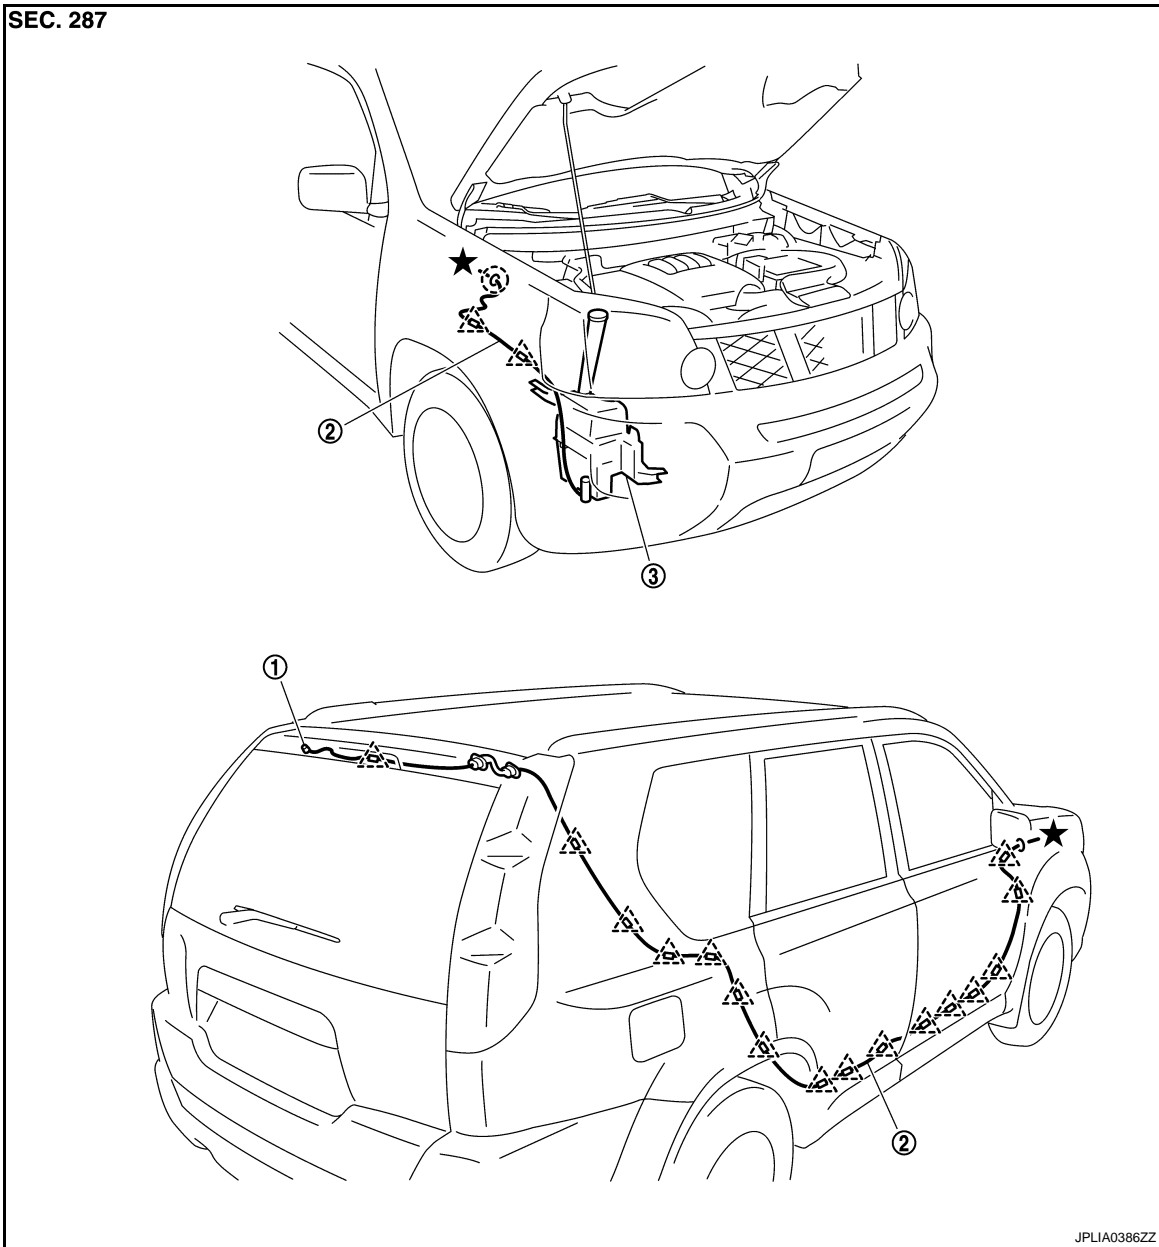

A
B
C
D
E
F
G
H
I
J
K

WW

M
N
O
P

Removal and Installation

INFOID:000000001209011

REMOVAL

1. Remove the back door inner finisher. Refer to [INT-31, "Exploded View"](#).
2. Remove the rear washer tube from the rear washer nozzle.