


CENTER CONSOLE ASSEMBLY

< ON-VEHICLE REPAIR >


2. Remove selector lever knob. (AT Models only) Refer to [TM-341, "Removal and Installation"](#).
3. Remove selector lever knob. (CVT Models only) Refer to [TM-515, "SPORT MODE : Removal and Installation"](#).
4. Remove shift lever knob. (MT Models only) Refer to [TM-21, "Removal and Installation"](#).
5. Remove console finisher.

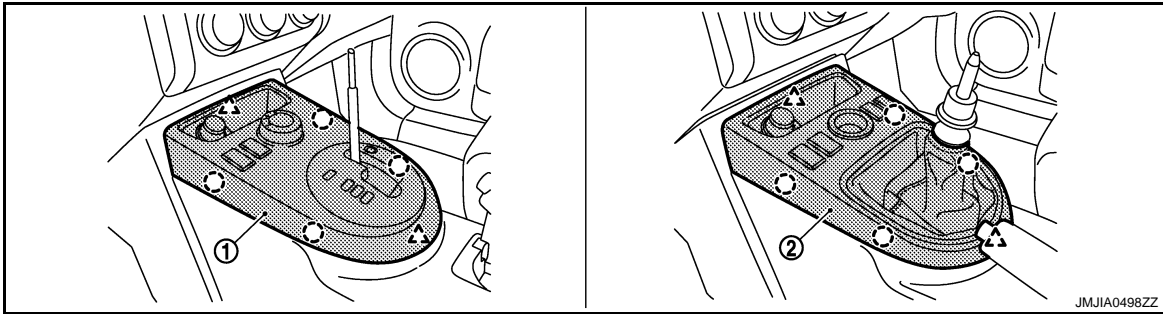


Console finisher (AT/CVT Models)

Console finisher (MT Models)


- Remove clips from rear of console finisher, and then remove pawl of front. Pull front console finisher upward to disengage from center console.
- Disconnect harness connectors.



6. Insert a deep-well socket wrench (A) to rotate adjusting nut to loosen cable sufficiently.

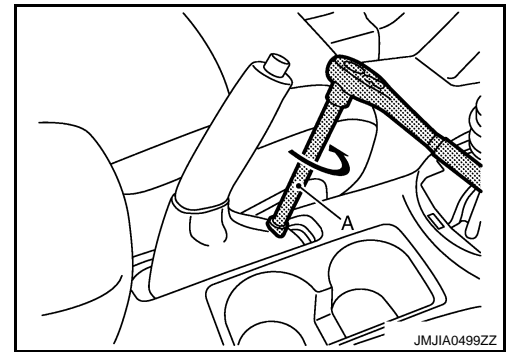

7. Remove instrument lower covers LH / RH.

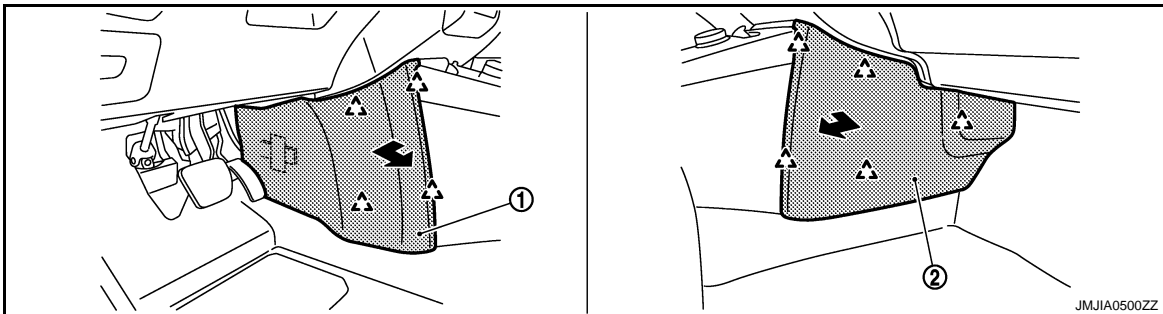

Instrument lower cover LH

Instrument lower cover RH

- Pull from the rear of instrument lower cover to release rear pawls.
- Pull backward to release instrument lower cover from instrument panel.

