


CENTER CONSOLE ASSEMBLY

< ON-VEHICLE REPAIR >


8. Remove center console front mounting screws (A) LH/RH.

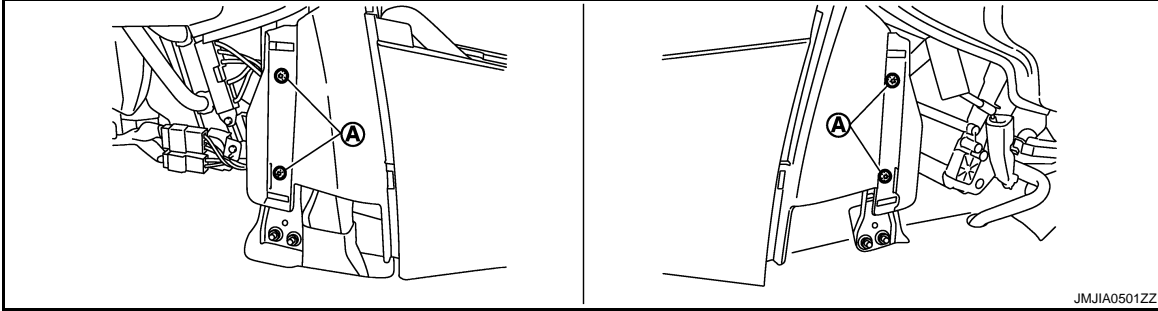

Center console mounting screws LH

Center console mounting screws RH

9. Remove center console rear mounting screws (A) LH/RH.

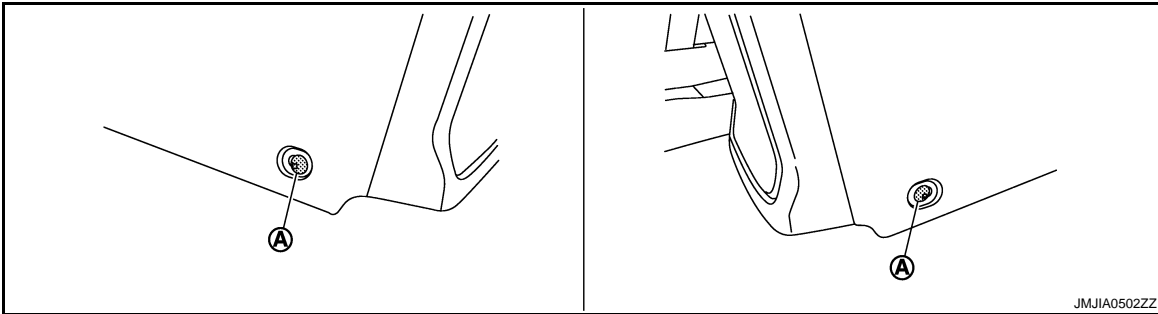

Center console mounting screws LH

Center console mounting screws RH

10. Disconnect console sub harness connectors, and then remove center console assembly.

INSTALLATION


Install in the reverse order of removal.


Disassembly and Assembly

INFOID:000000001160452


Disassembly

- Remove console rear finisher assembly.
 - Console rear finisher assembly fixing clips using a remover tool (A).
 - Pull back console rear finisher assembly (1).

 : Clip

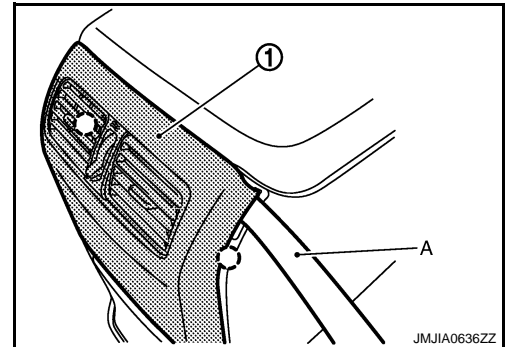

- Remove rear cup holder assembly.
 - Remove rear cup holder assembly fixing screws (A).
 - Pull back rear cup holder assembly (1).

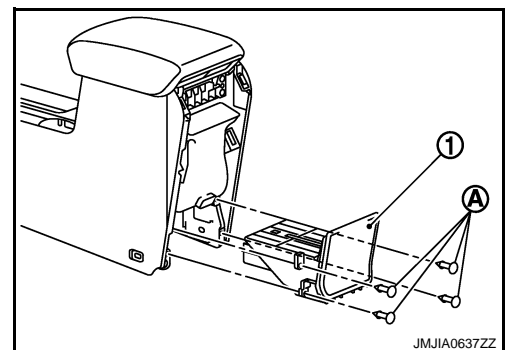

A
B
C
D
E
F
G
H
I

IP

K
L
M
N
O
P